

Updating the software of 7817-48-49-59-17B-48B-49B-59B



Attention: Take care that the remaining battery life is sufficient (> 30%), else plug the appliance on the mains with the provided adapter.

We recommend that you make a backup of all camera settings before the update.

For the 7848-48B :

You can easily update the software to get new functionalities.
The update requires an USB stick.

To achieve the update:

- Download the update file **784X zip file** on our website (www.sefram.com)
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on

- Select a satellite or terrestrial menu, press configuration



- Insert the USB stick into the connector of the appliance.

- Select Update:  Software update

For the 7817-17B-49-49B :

You can easily update the software to get new functionalities.
The update requires an USB stick.

To achieve the update:

- Download the update file **784X zip file** on our website (www.sefram.com)
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on

- Go to the Home page,  press configuration



- Insert the USB stick into the connector of the appliance.

- Select Update

For the 7859-59B :

You can easily update the software to get new functionalities.
The update requires an USB stick.

To achieve the update:

- Download the update file **784X zip file** on our website (www.sefram.com)
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on

- Select Optical or RF, press configuration



- Insert the USB stick into the connector of the appliance.

- Select Update: