




## How to update of the internal software

The internal software is regularly updated with the latest evolutions. These updates are available on our website.

To update it, copy the file you receive on an USB stick.  
Plug it on to the USB connector at the rear of the appliance.

Press  , then press  to access to the update.

To launch the update process, press 

The internal software automatically copies the files required for the new version.

Stop and restart the appliance at the end of the update process.